

DETAIL #:
0300-PLM-1120
Aussie Shield 300-PLM

Typical Penetration

Aussie Shield 300-PLM




SHEATHING PER
PROJECT DESIGN

AUSSIE 300-PLF LIQUID FLASHING AT
15 MILS EXTENDING 2" ONTO
SHEATHING AND 2" UP THE PIPE


AUSSIE 300-PLM LIQUID
MEMBRANE AT 15 DRY MILS

PIPE PENETRATION

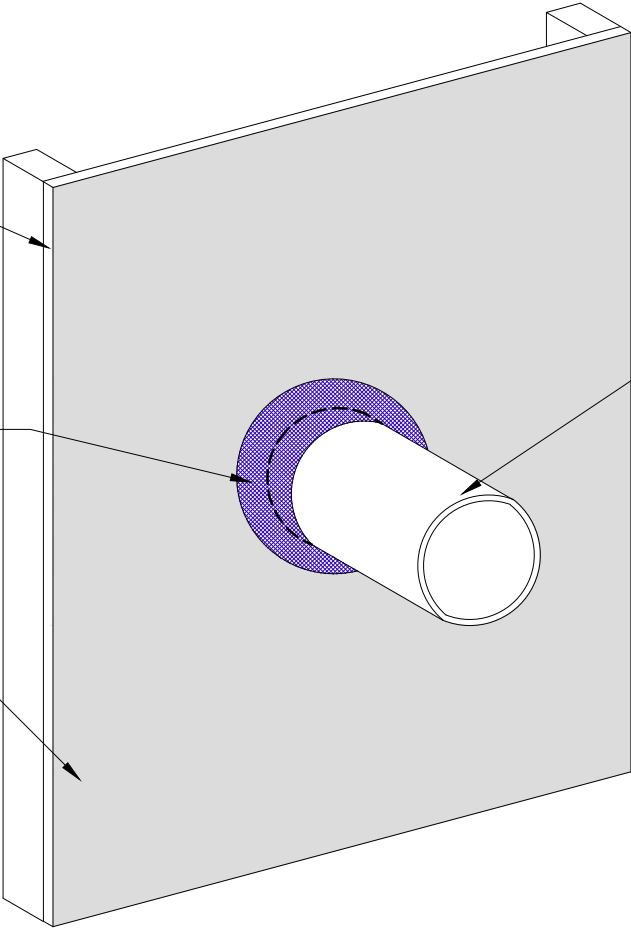


DETAIL #:
0300-PLM-1100.1
Aussie Shield 300-PLM

Typical Window Flashing Pre-Treatment with Aussie 300-PLF Aussie Shield 300-PLF

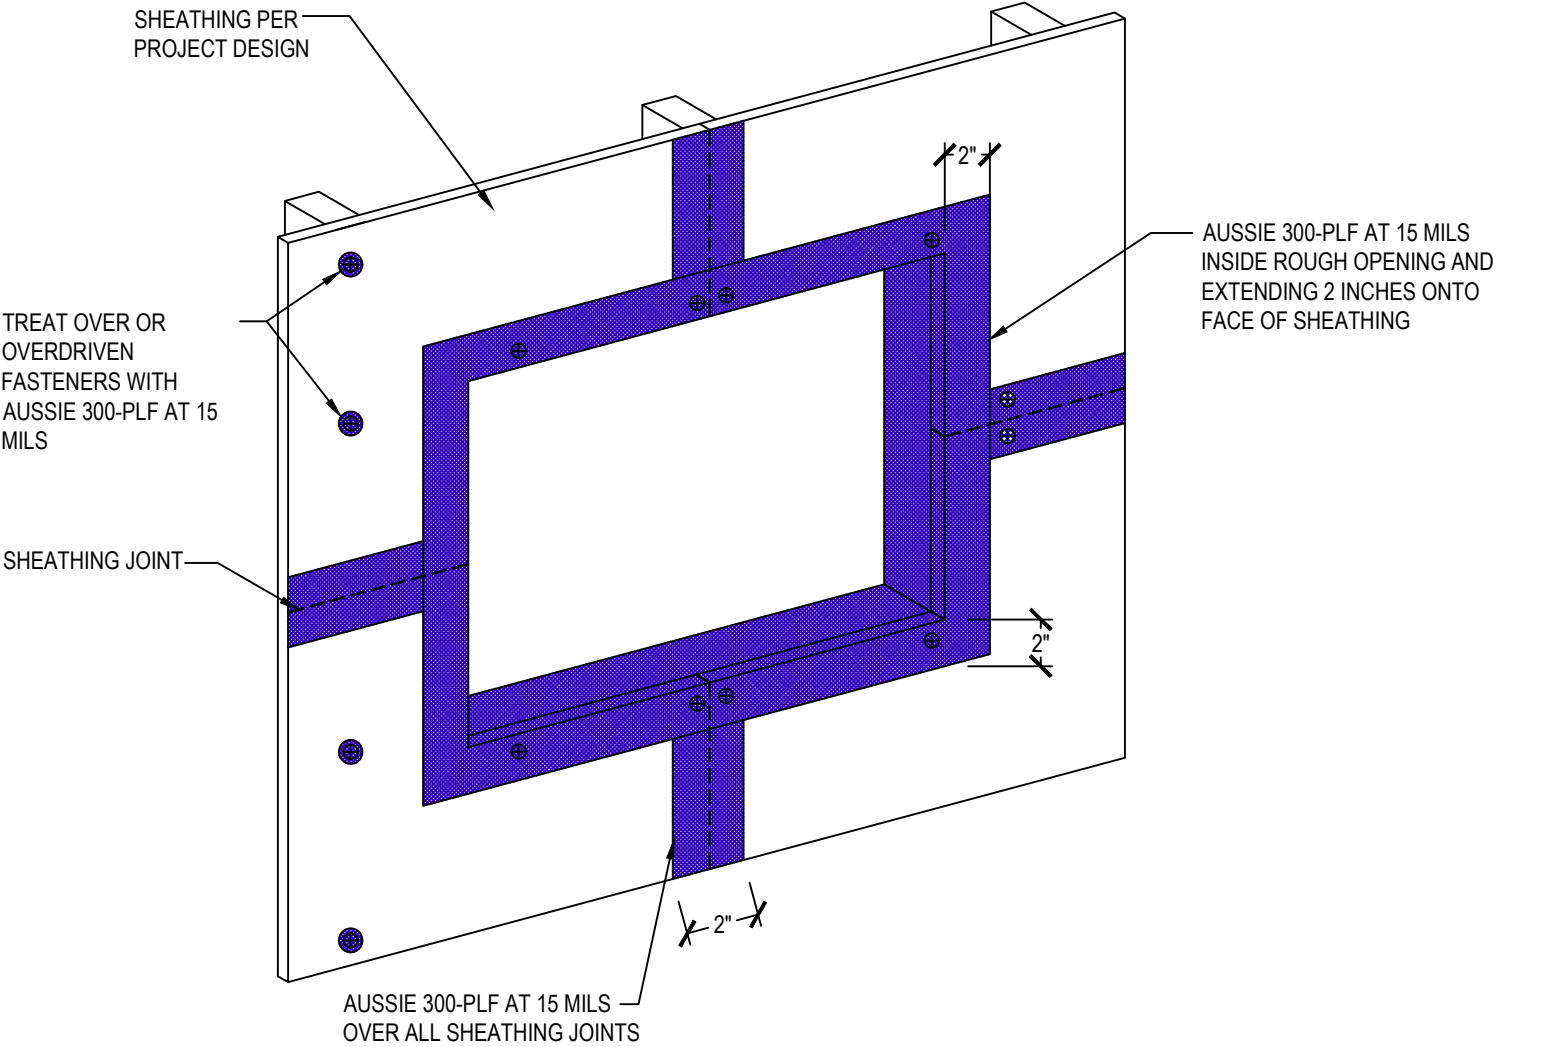


DETAIL #:
0300-PLM-1100.2
Aussie Shield 300-PLM

Typical Window Flashing Pre-Treatment, then 300-PLM Aussie Shield 300-PLM/PLF

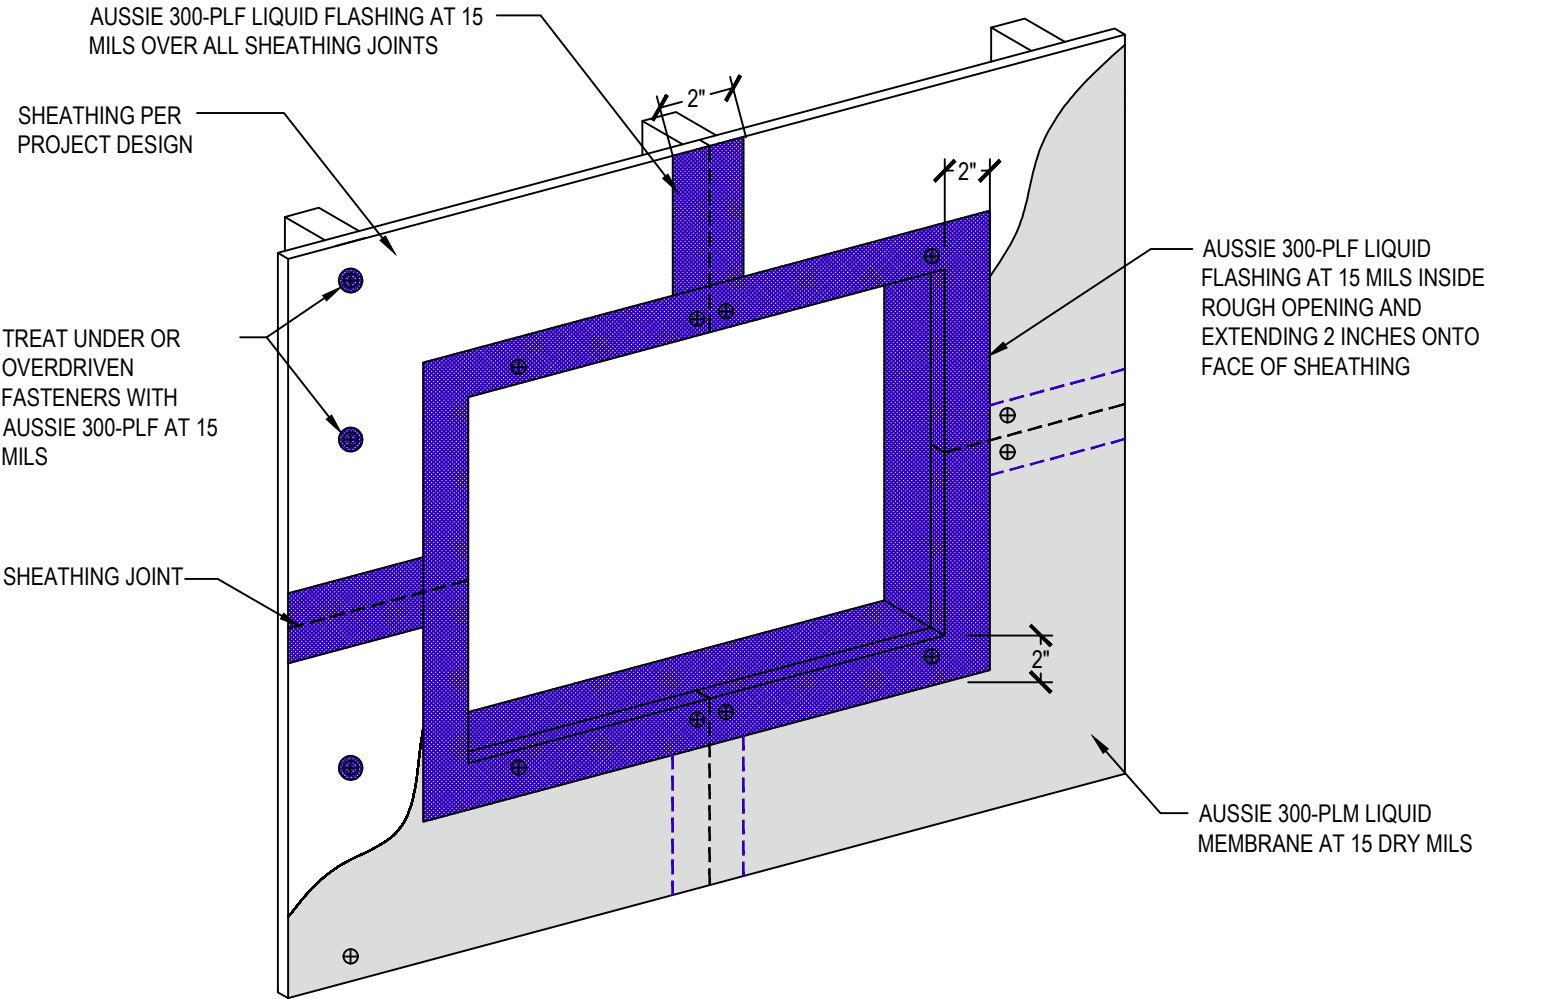


DETAIL #:
0300-PLM-1100.3
Aussie Shield 300-PLM

Typical Window Flashing Post Treatment Aussie Shield 300-PLM

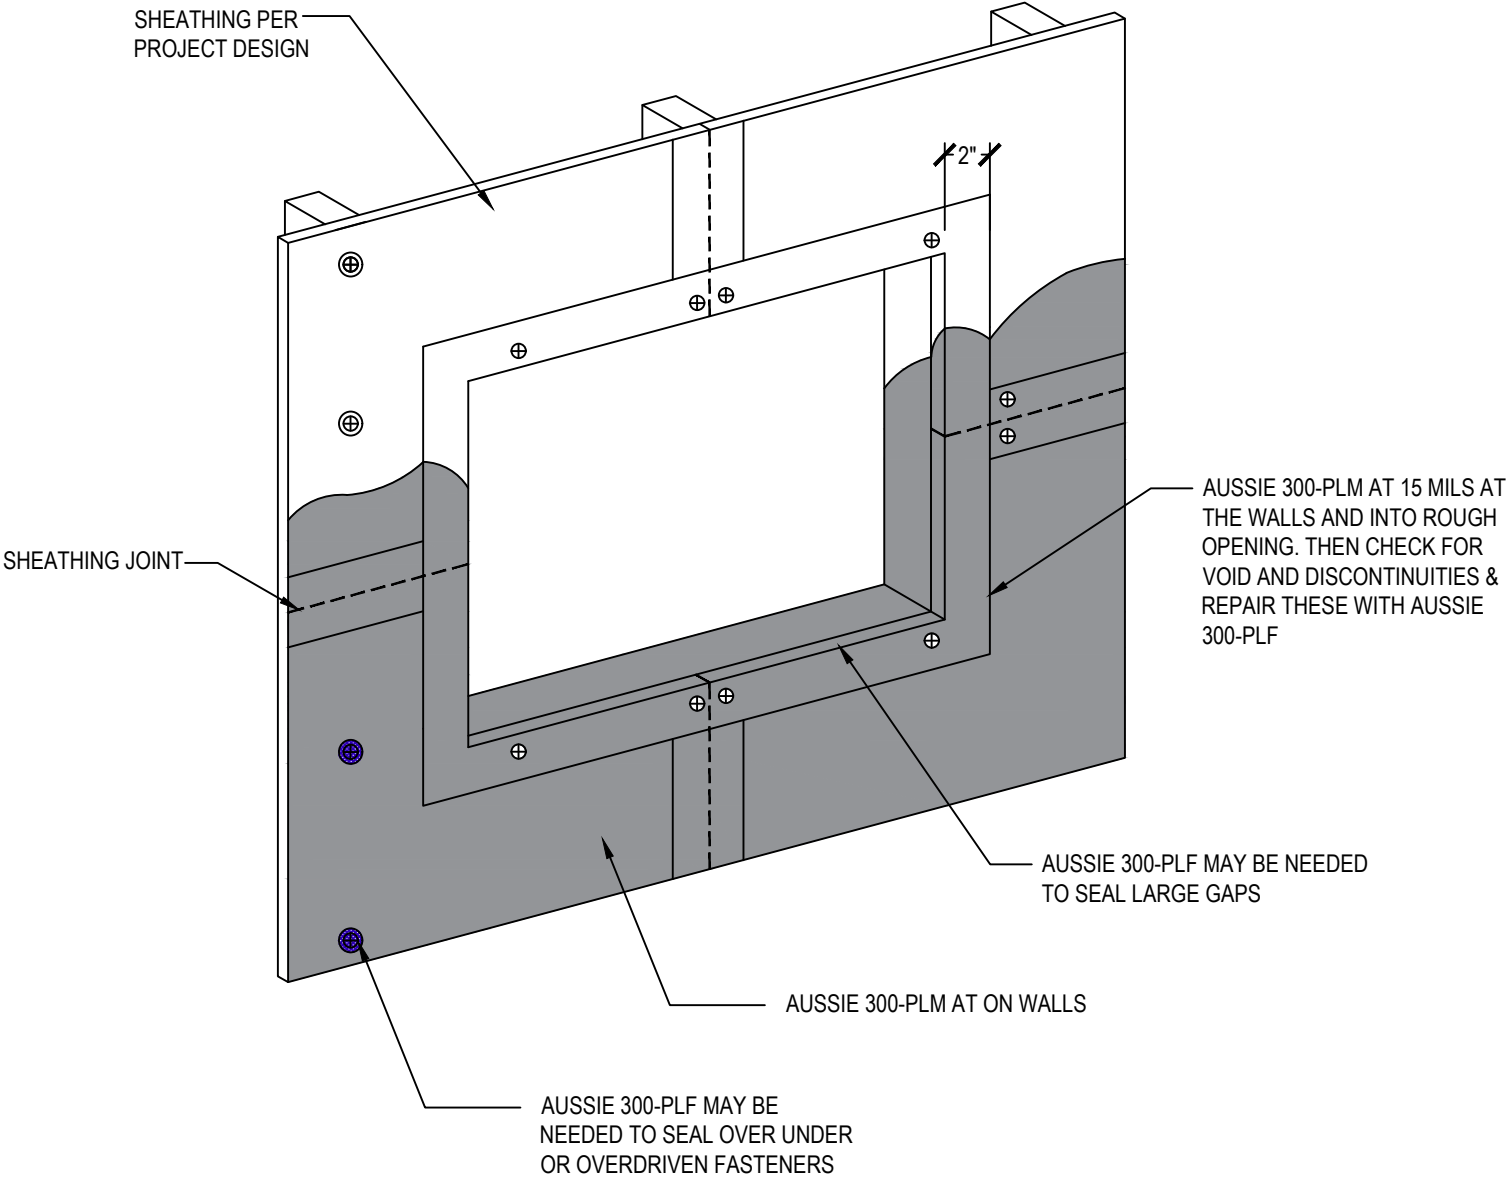


DETAIL #:
0300-PLM-1110.1
Aussie Shield 300-PLM

Sheathing Joint Detailing Pre-Treatment with 300-PLF Aussie Shield 300-PLM/PLF

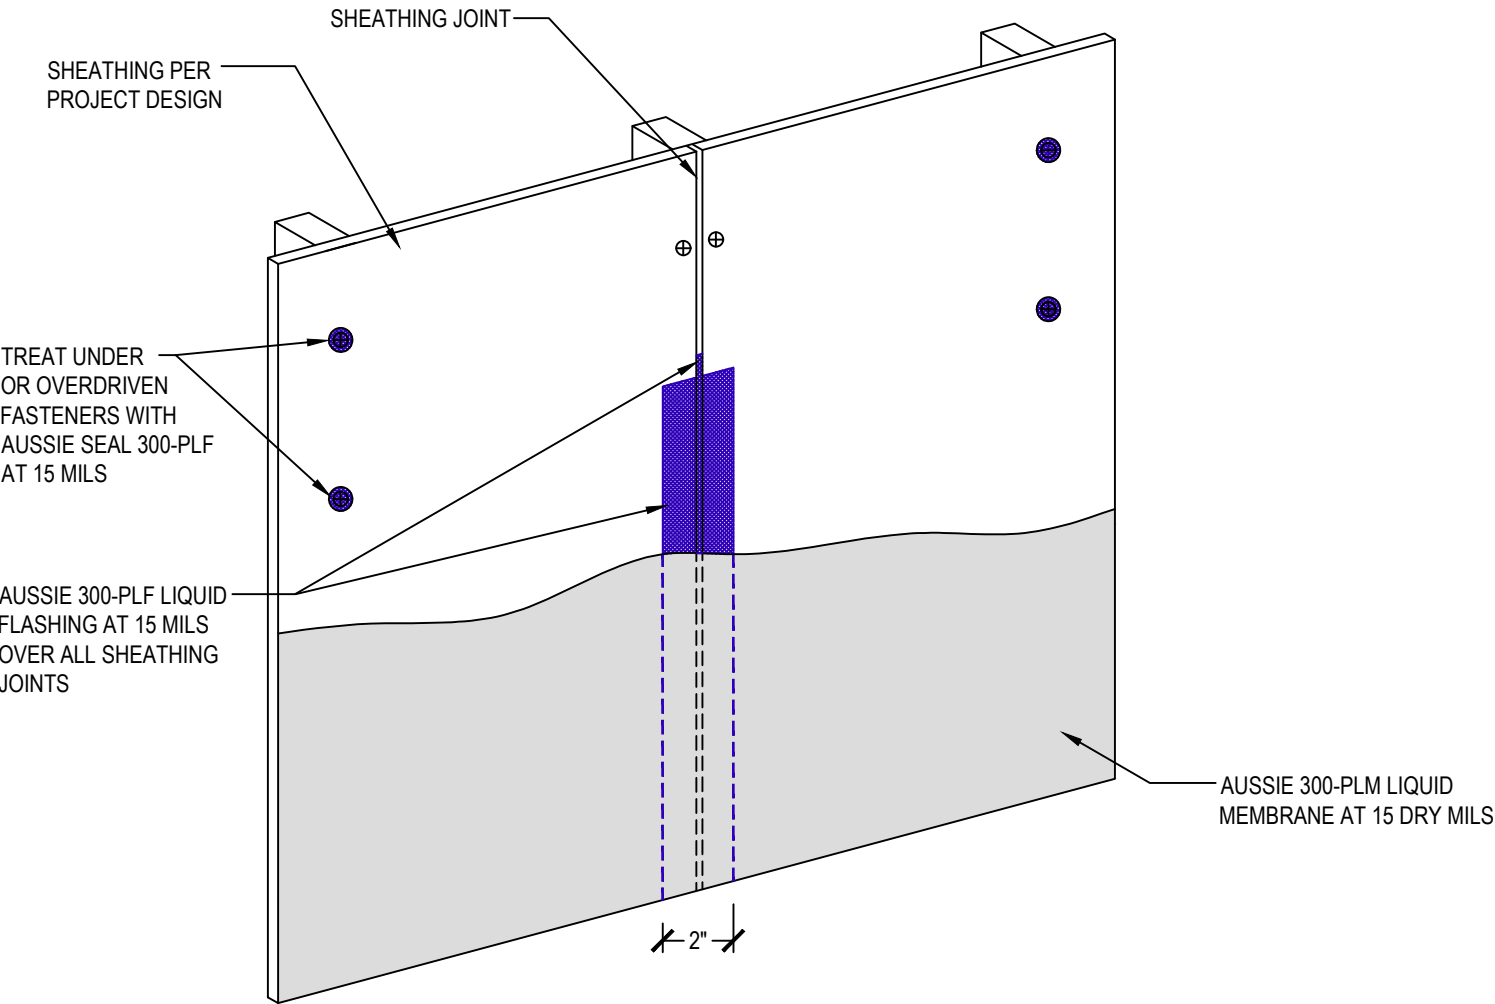


DETAIL #:
0300-PLM-1110.2
Aussie Shield 300-PLM

Sheathing Joint Detailing Post Treatment Aussie Shield 300-PLM

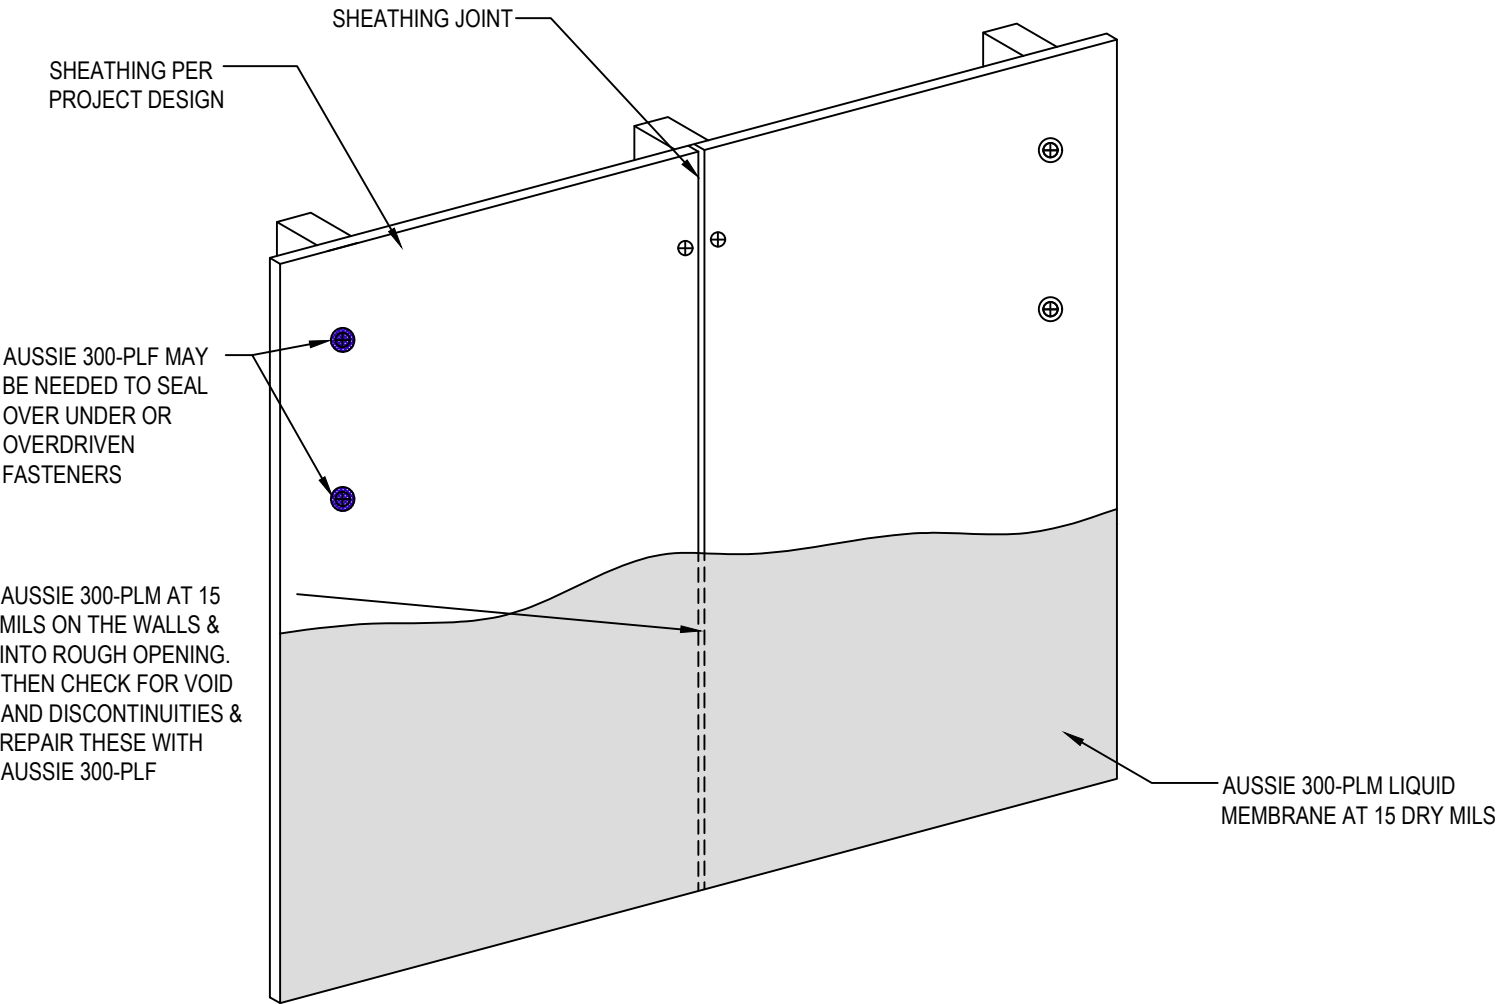


DETAIL #:
0300-PLM-1115.1
Aussie Shield 300-PLM

Inside and Outside Corners Pretreatment with 300-PLF Aussie Shield 300-PLM/PLF

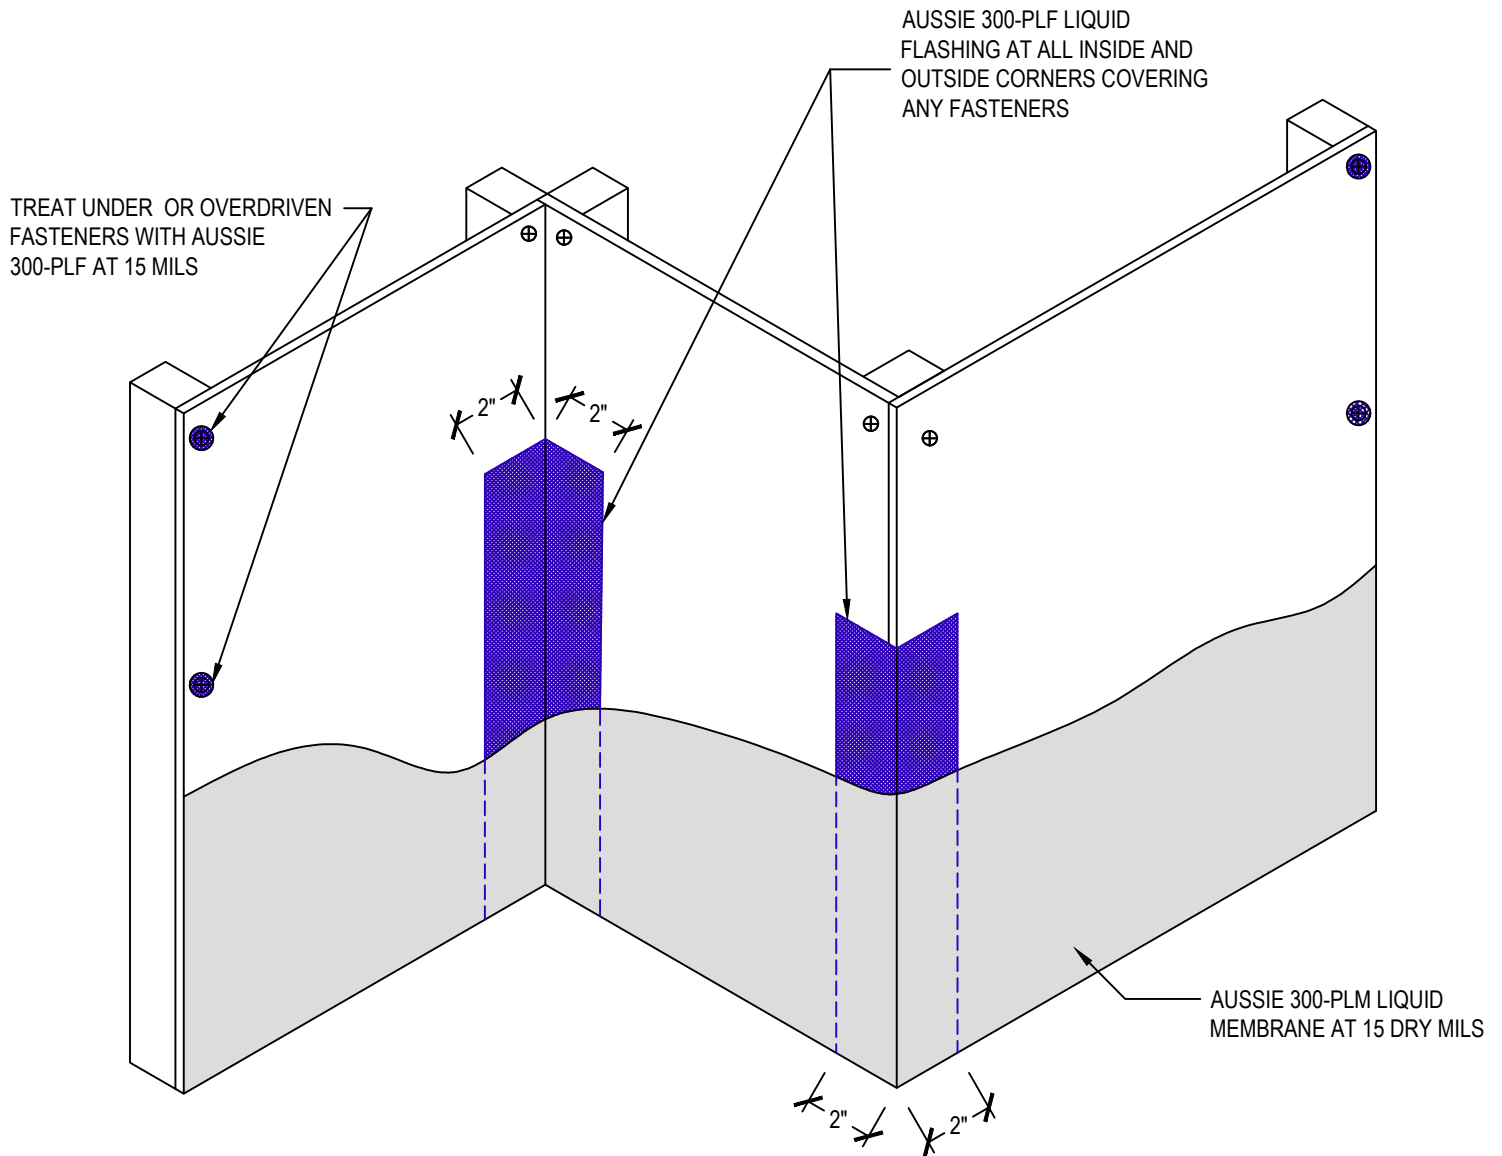


DETAIL #:
0300-PLM-1115.2
Aussie Shield 300-PLM

Inside and Outside Corners Post Treatment Aussie Shield 300-PLM

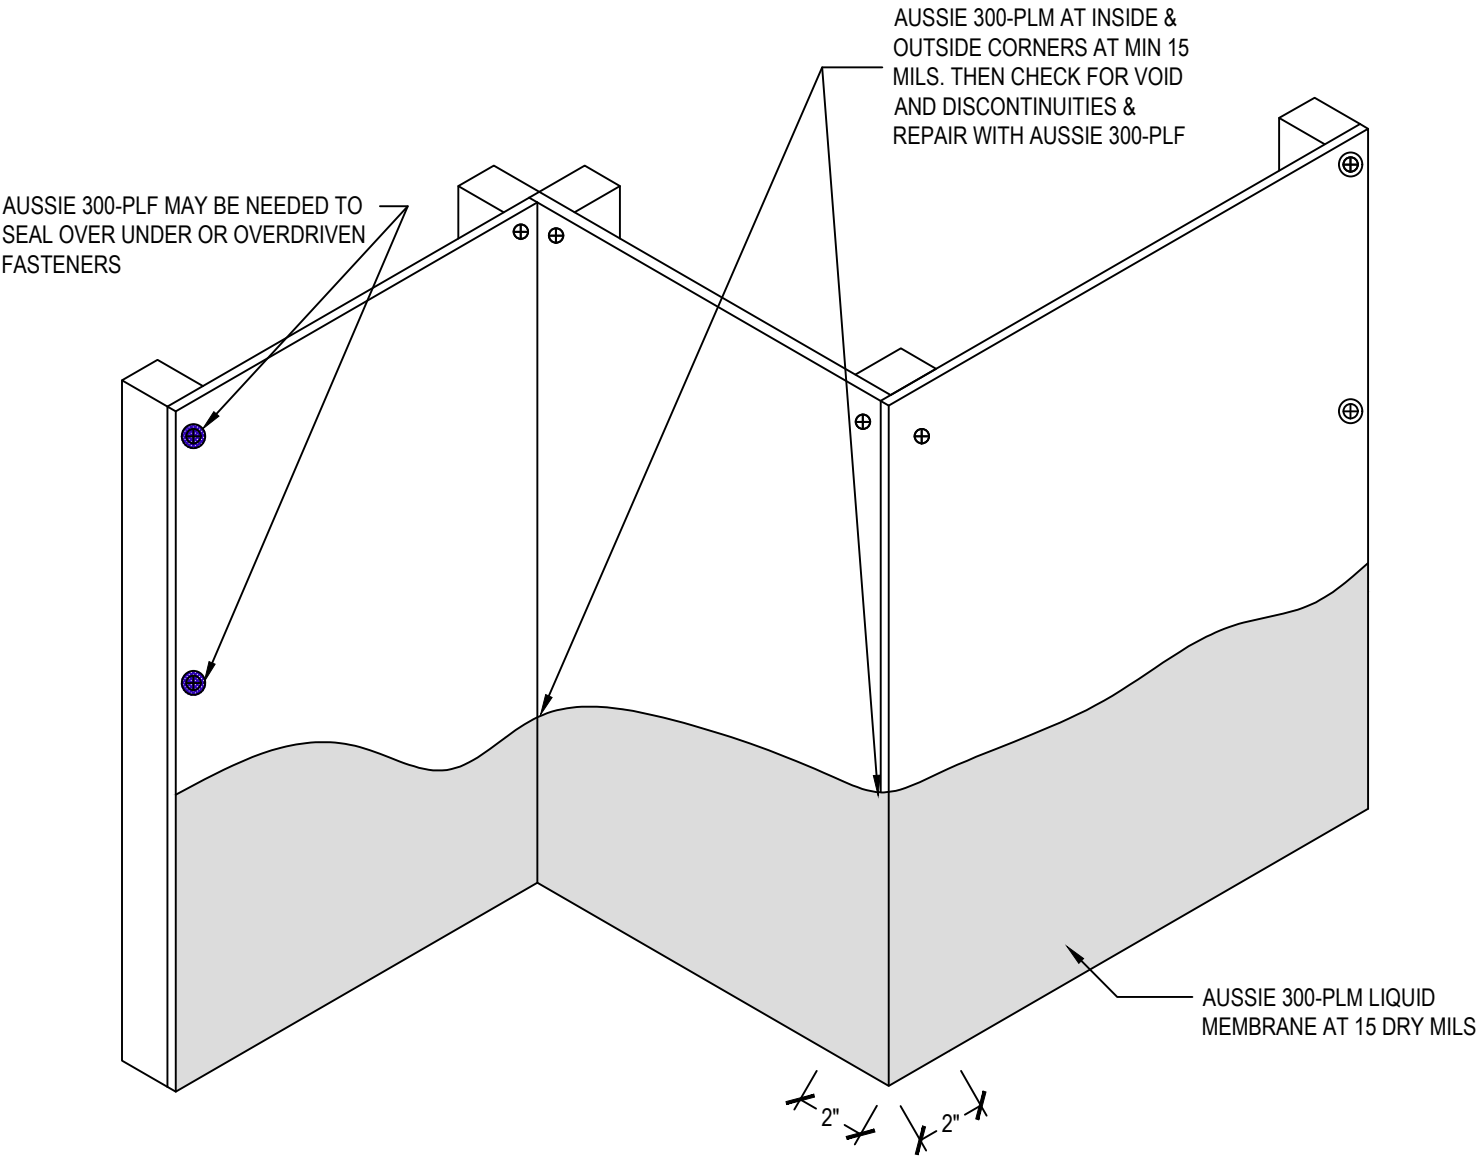

DETAIL #:
0300-PLM-1125
Aussie Shield 300-PLM

Transition to Below-Grade
Waterproofing - Flush Foundation
Aussie Shield 300-PLM

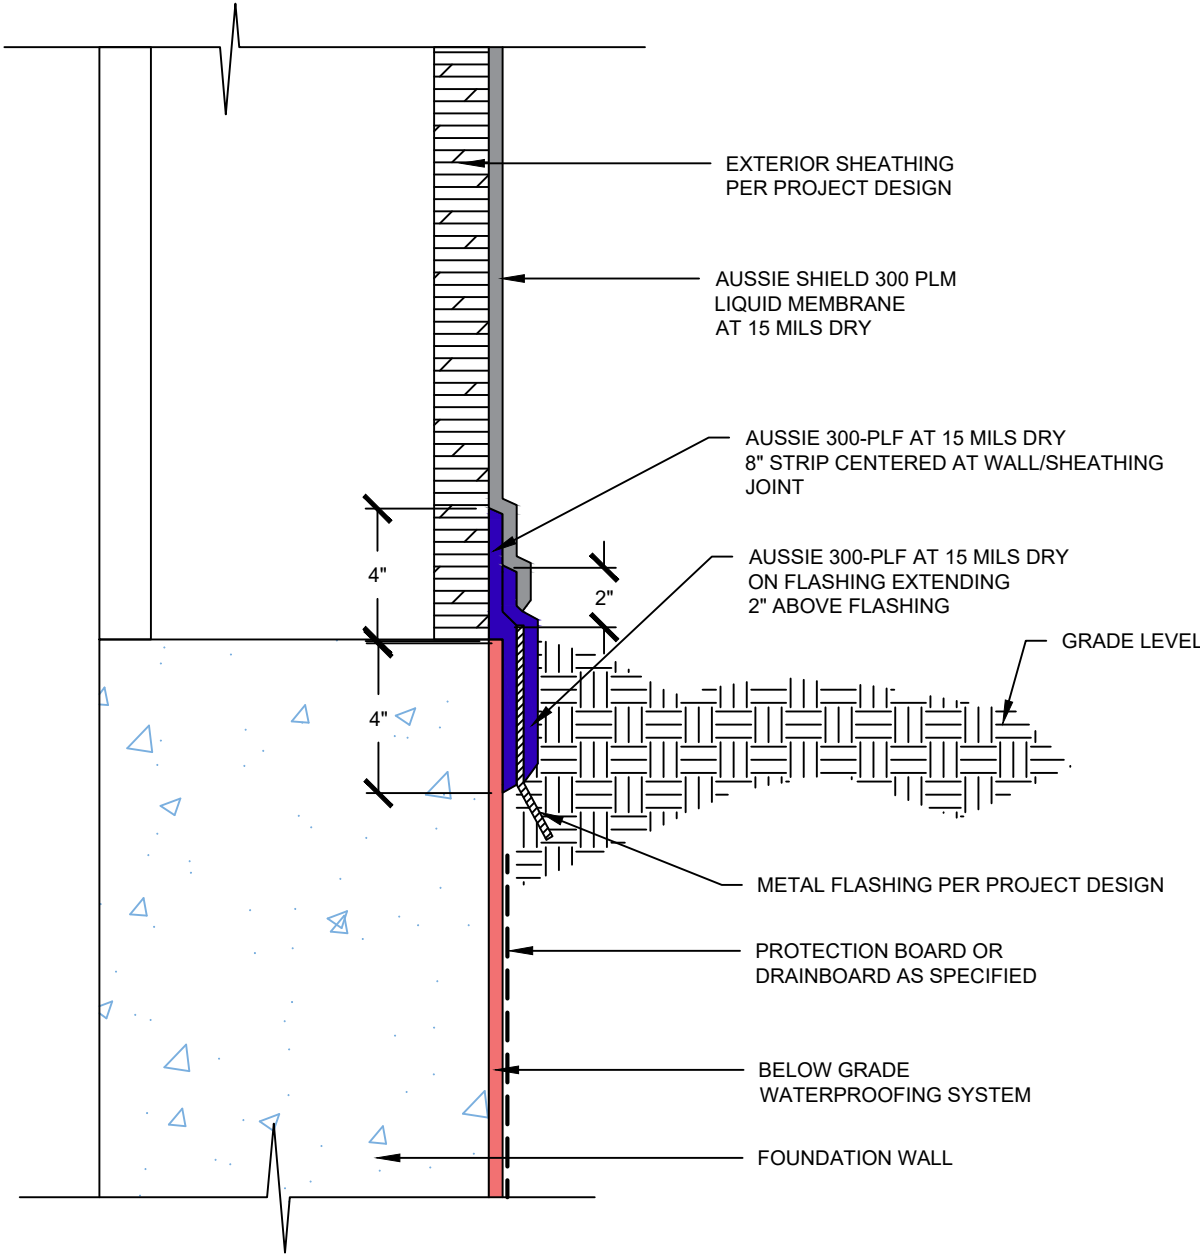


DETAIL #:
0300-PLM-1126
AVM System 300 -PLM

Transition to AVM 620 Deck Coating with L Metal



AVM SYSTEM 300 PLM

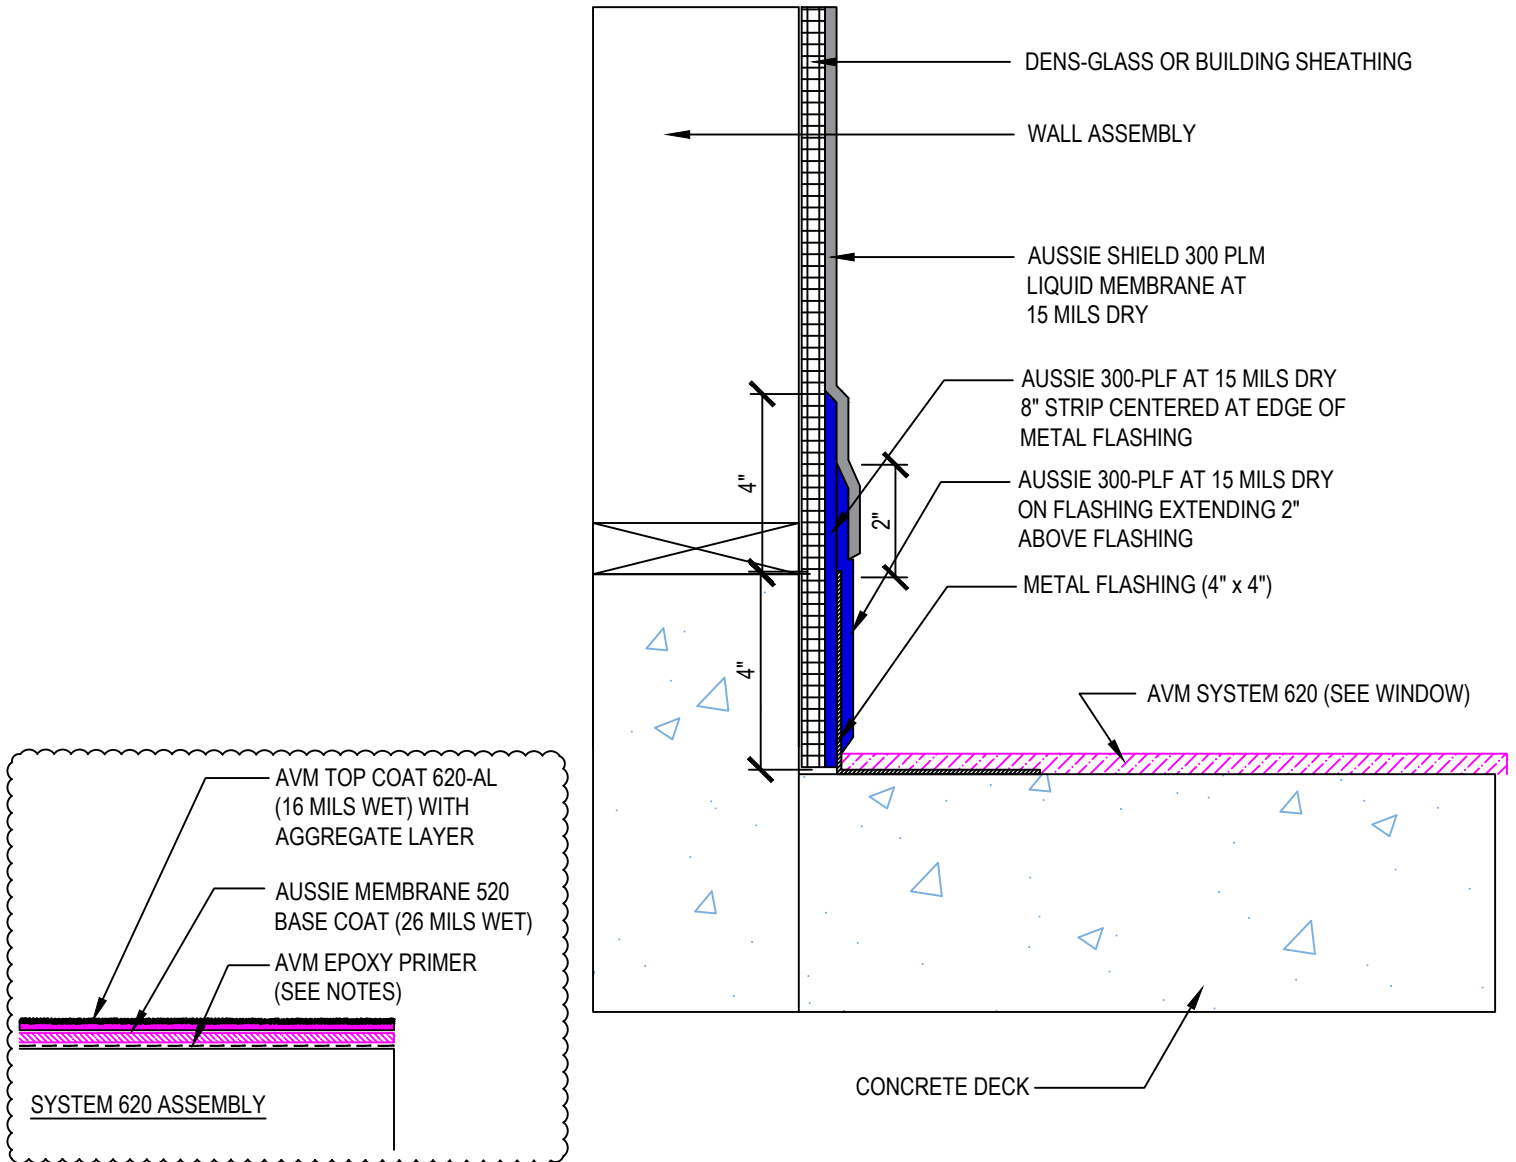

Notes:


1. Epoxy primer may be required to achieve proper adhesion depending on the substrate

DETAIL #:
0300-PLM-1127
System 300 PLM

Transition to AVM 620 Deck Coating



AVM SYSTEM 620 - Pedestrian Deck Coating

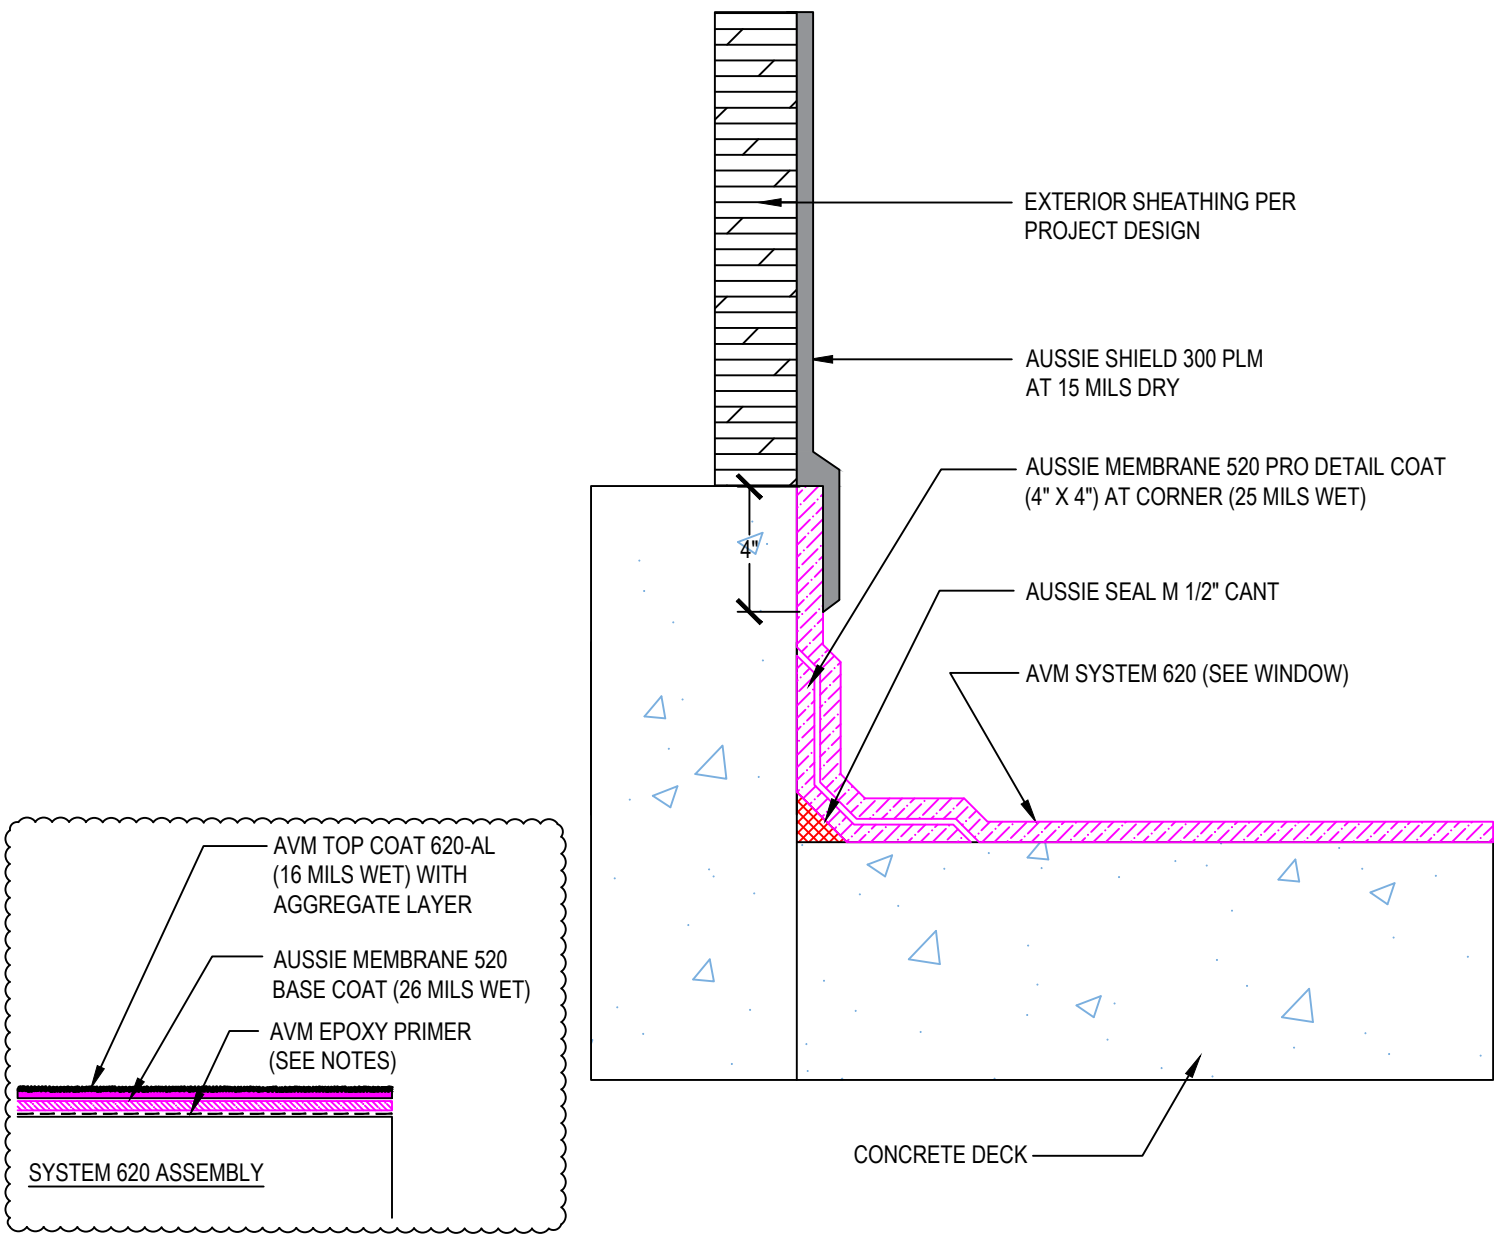


Notes:

- 1. Epoxy primer may be required to achieve proper adhesion depending on the substrate

DETAIL #:
0300-PLM-1130
Aussie Shield 300-PLM


Window Head Detail

Aussie Shield 300-PLM

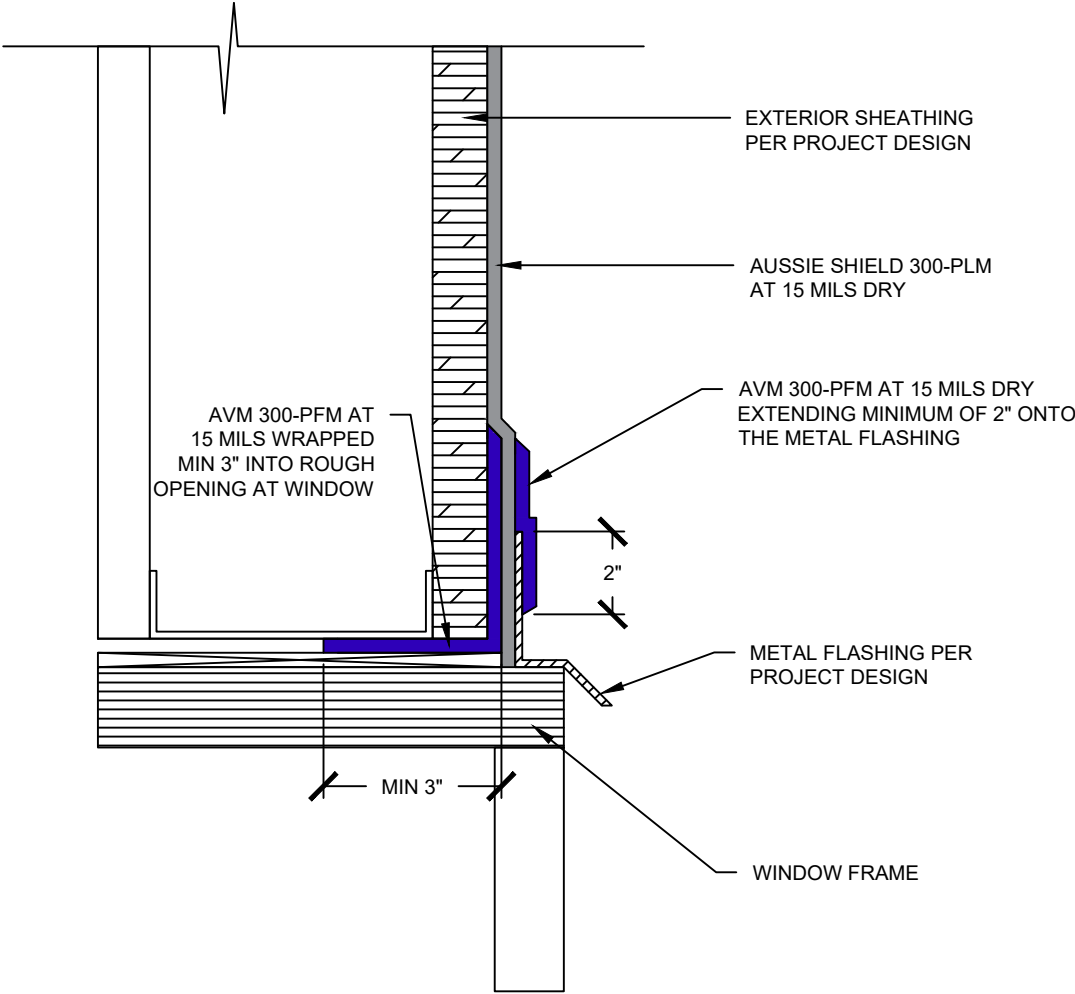


DETAIL #:
0300-PLM-1135.1
Aussie Shield 300-PLM

Pan Flashing
Pre-Treatment of Rough Opening
Aussie Shield™ 300-PLM/PLF

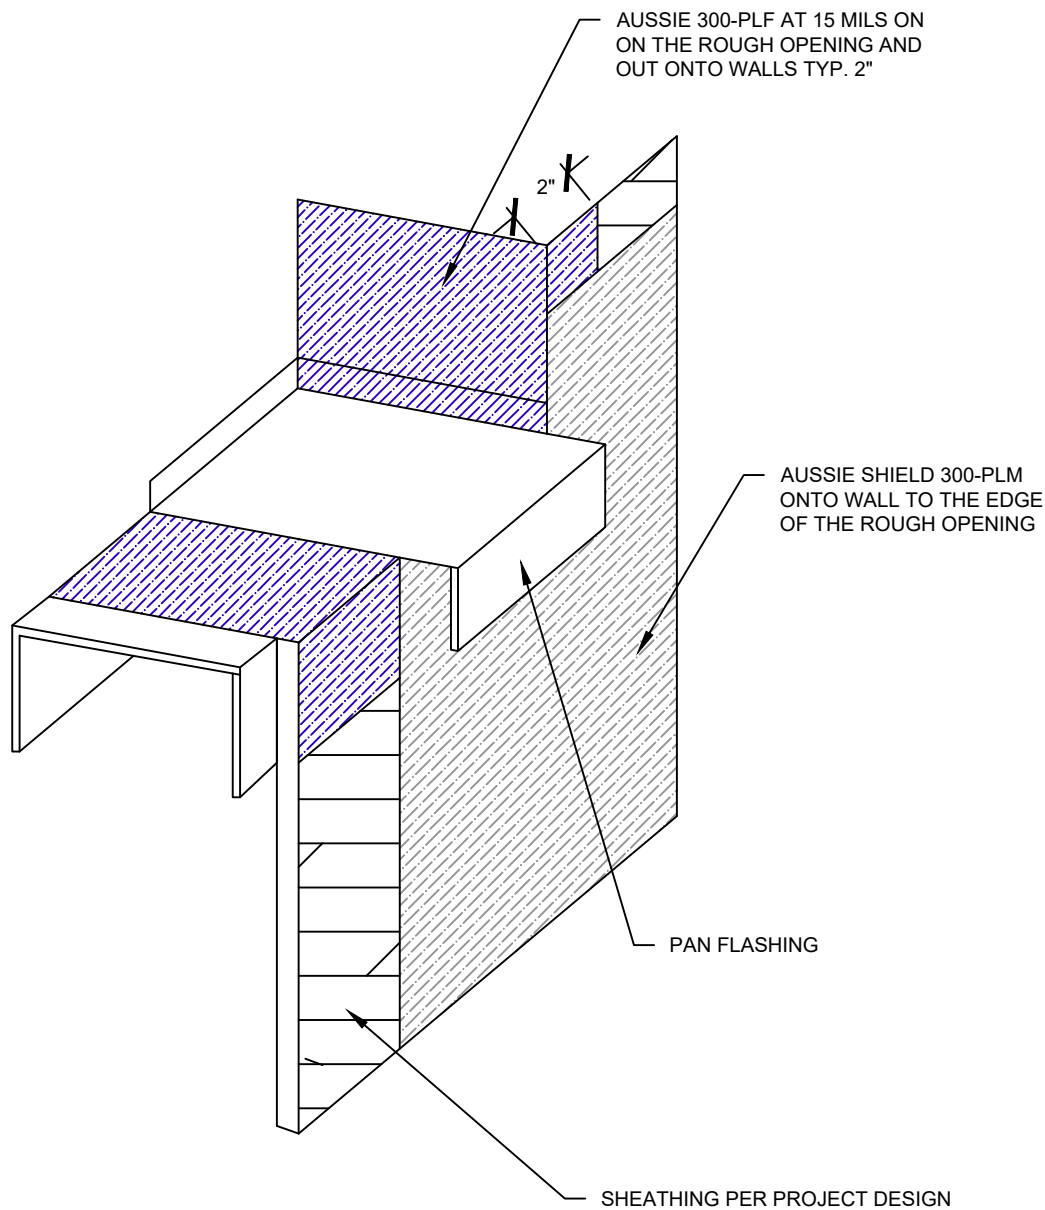


DETAIL #:
0300-PLM-1135.2
Aussie Shield 300-PLM

Pan Flashing
Post Treatment
Aussie Shield™ 300-PLM

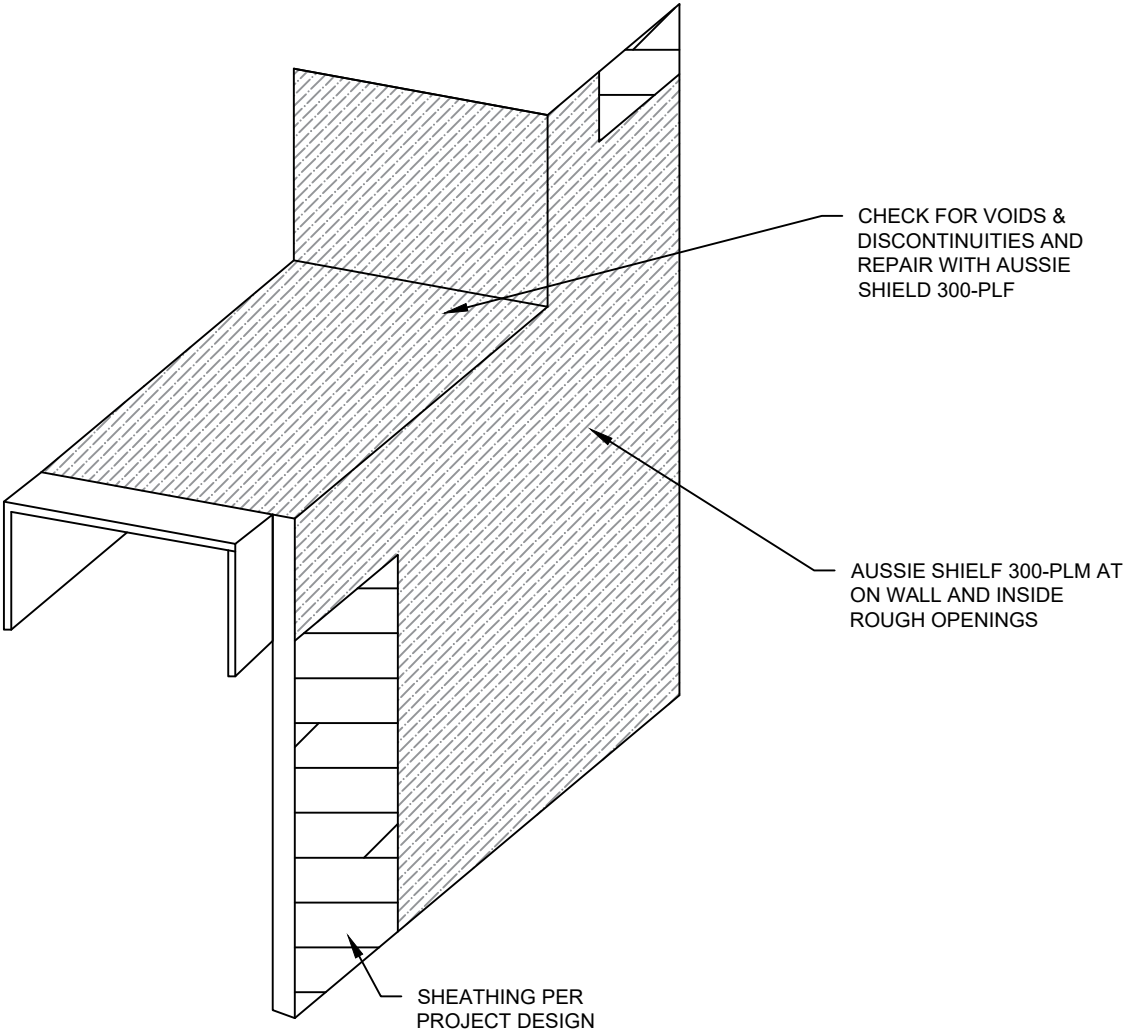

DETAIL #:
0300-PLM-1400
System:
System 300 PLM


CMU or Concrete Arched Window Rough Opening Aussie Shield 300-PLM

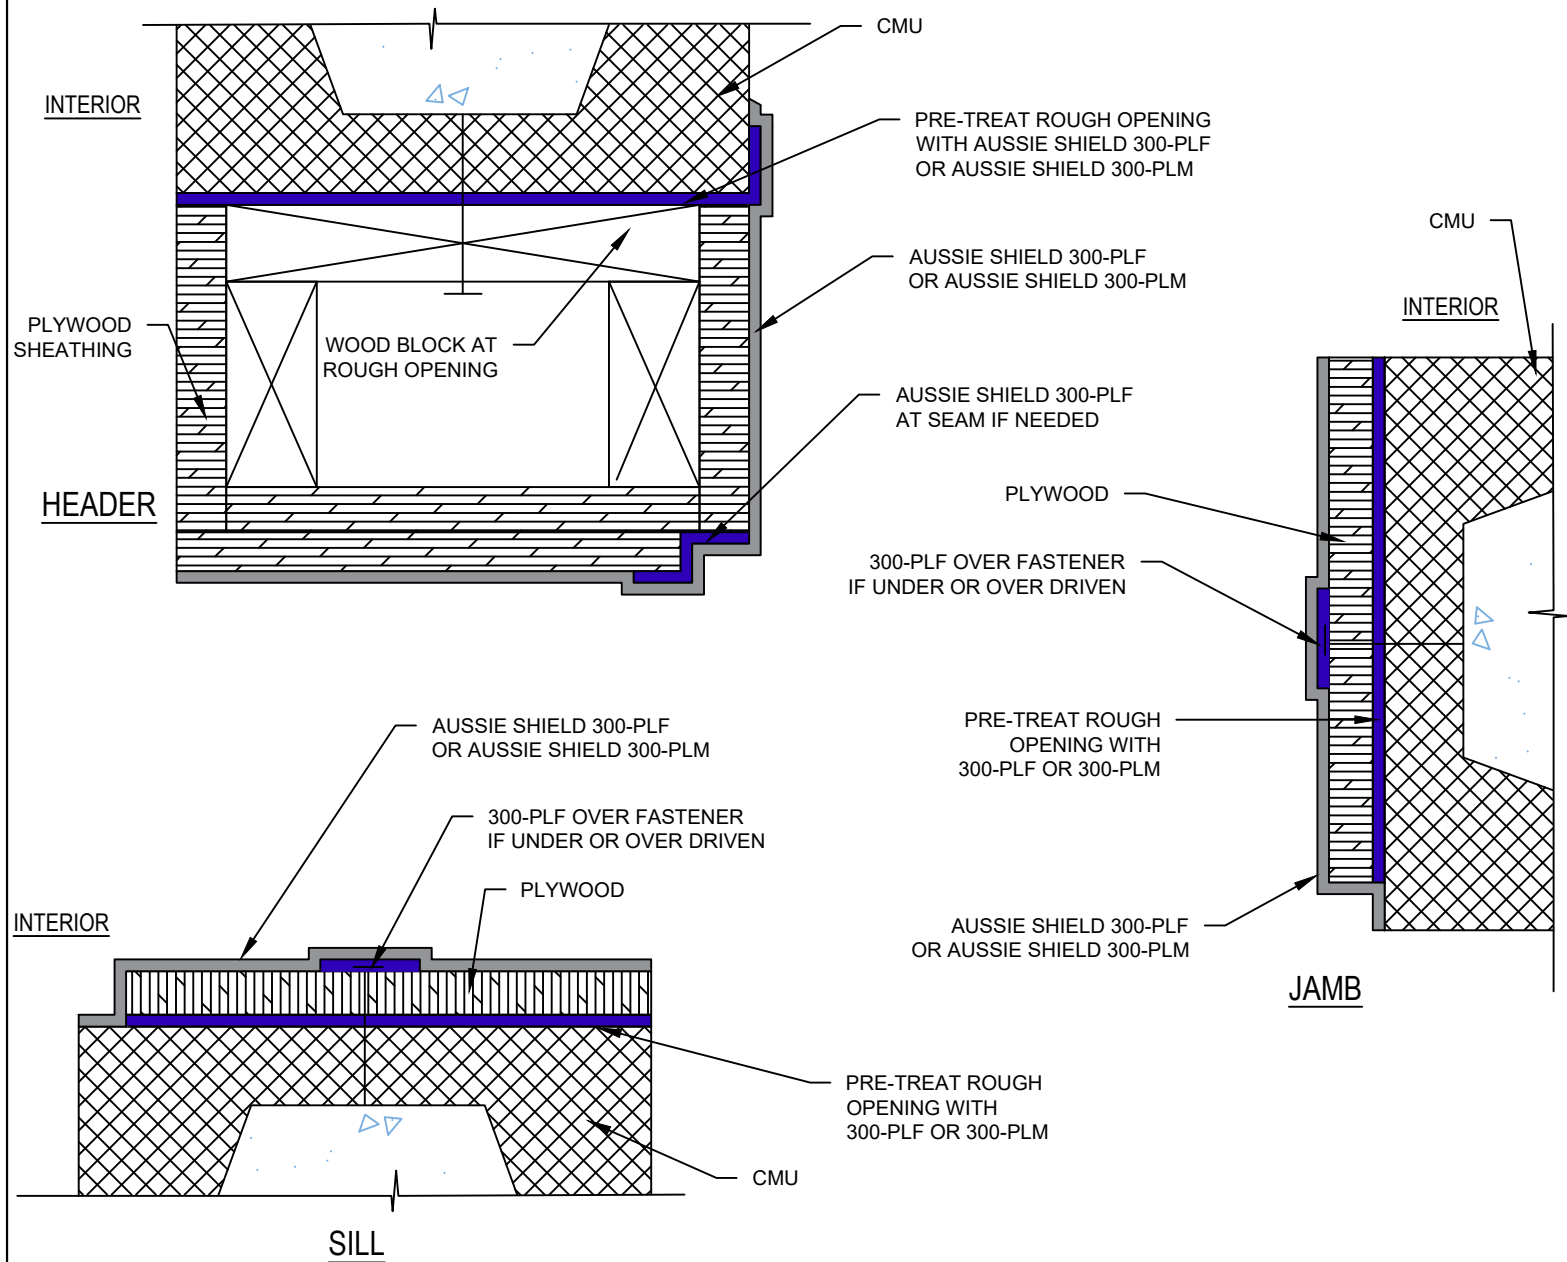

DETAIL #:
0300-PLM-1401
System:
System 300 PLM


Rough Opening on Sheathing Wall

Aussie Shield 300-PLM

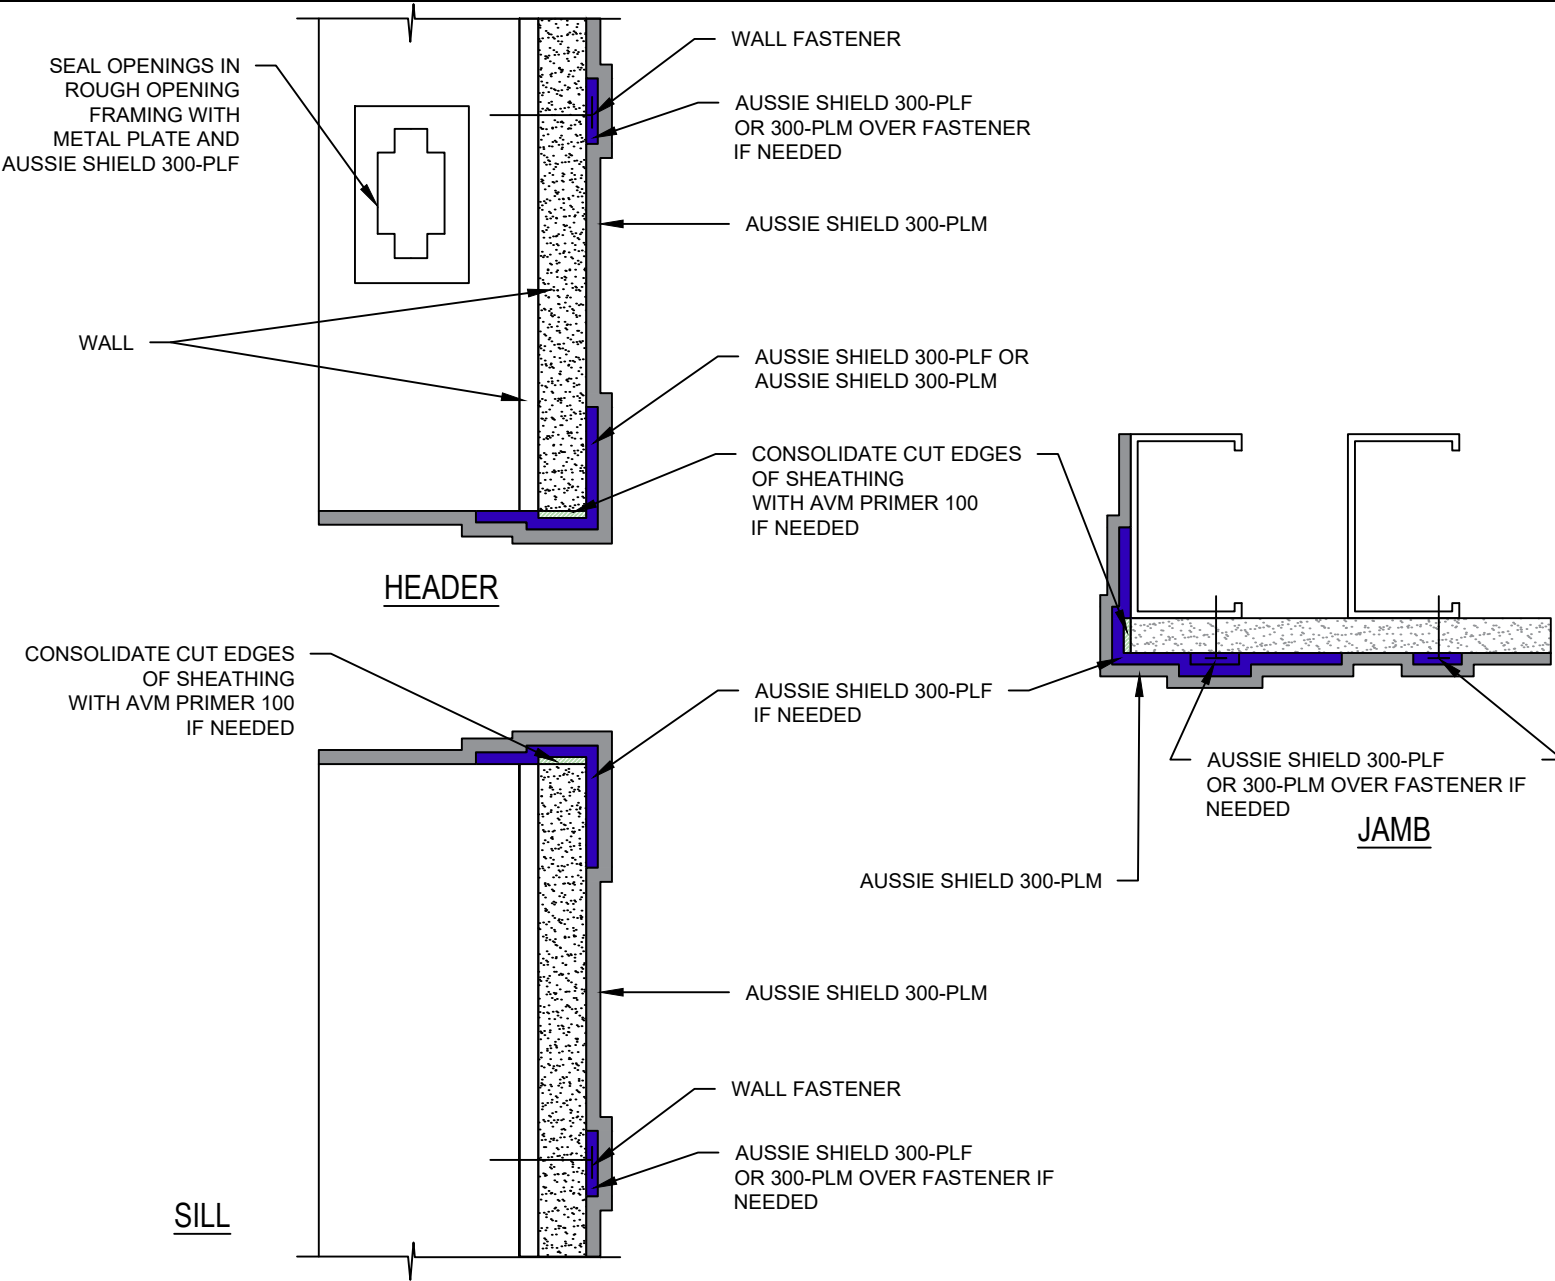

DETAIL #:
0300-PLM-1402
System:
System 300 PLM

Rough Opening with 300-PLF or 300-PLM Building Wrap Aussie Shield 300-PLM

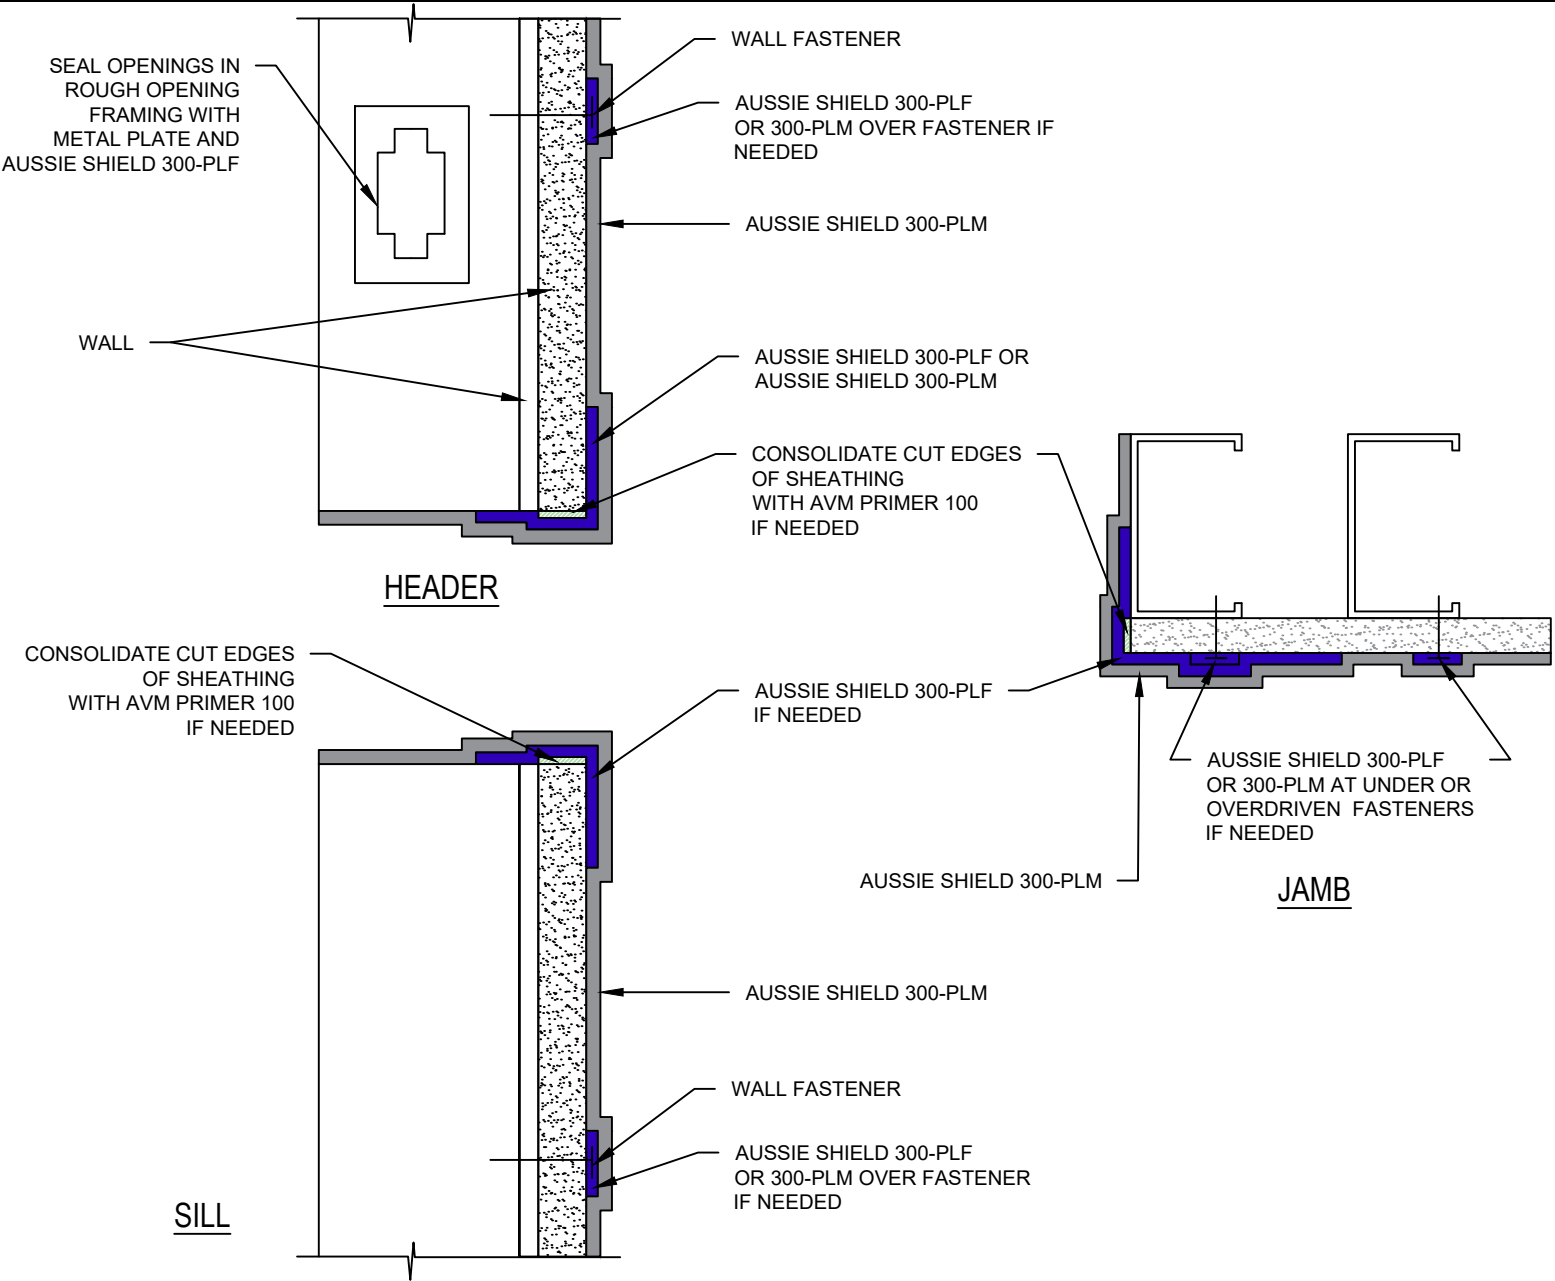

DETAIL #:
0300-PLM-1403
System:
Aussie Shield 300-PLM

Window Head Detail Through Wall Flashing & Term Bar Aussie Shield 300-PLM

