


DETAIL #:
System:
0520-CD2
Aussie Membrane 520

Plywood Joint Detailing with Tile Over System

AUSSIE MEMBRANE 520

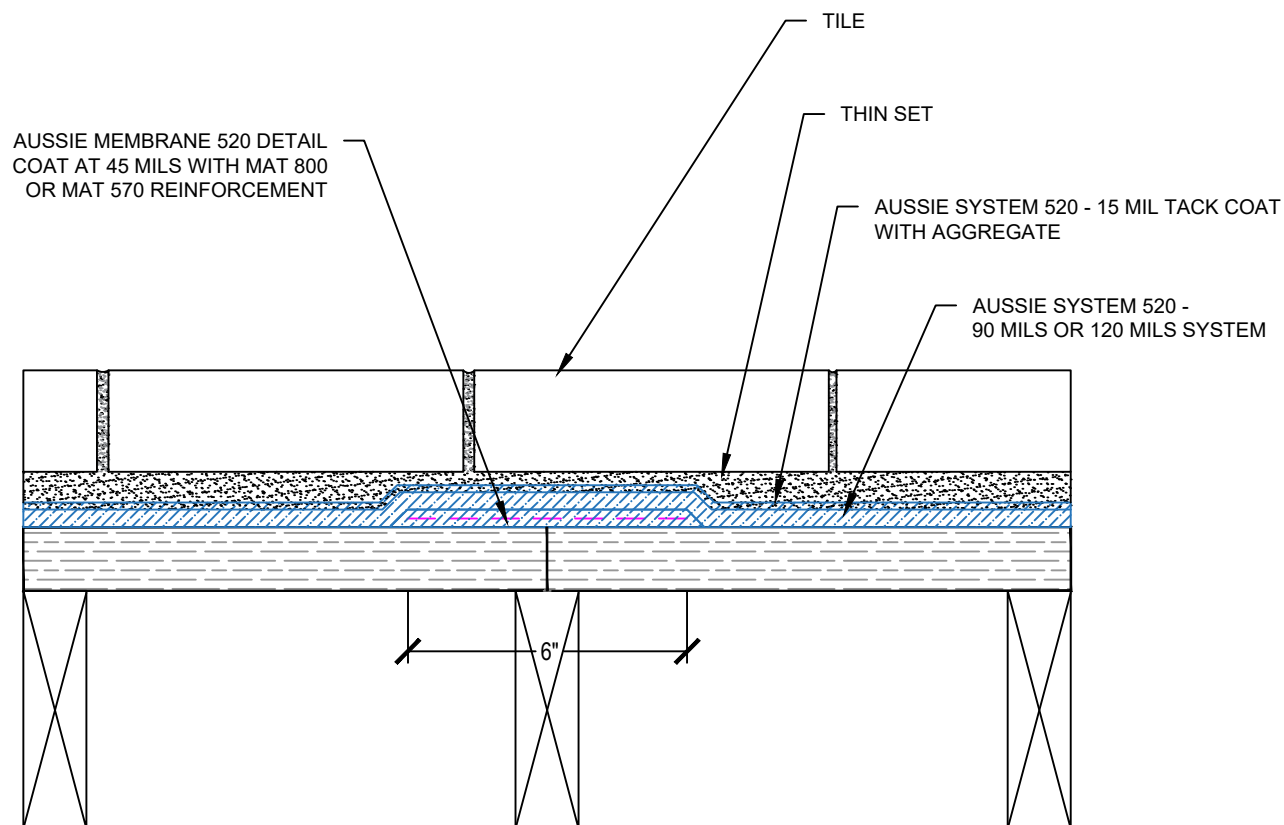

Notes:

1. Epoxy primer may be required to achieve proper adhesion depending on the substrate