


DETAIL #:
0620V-4007
System:
AVM System 620V

Parking Bumper

Aussie System 620V

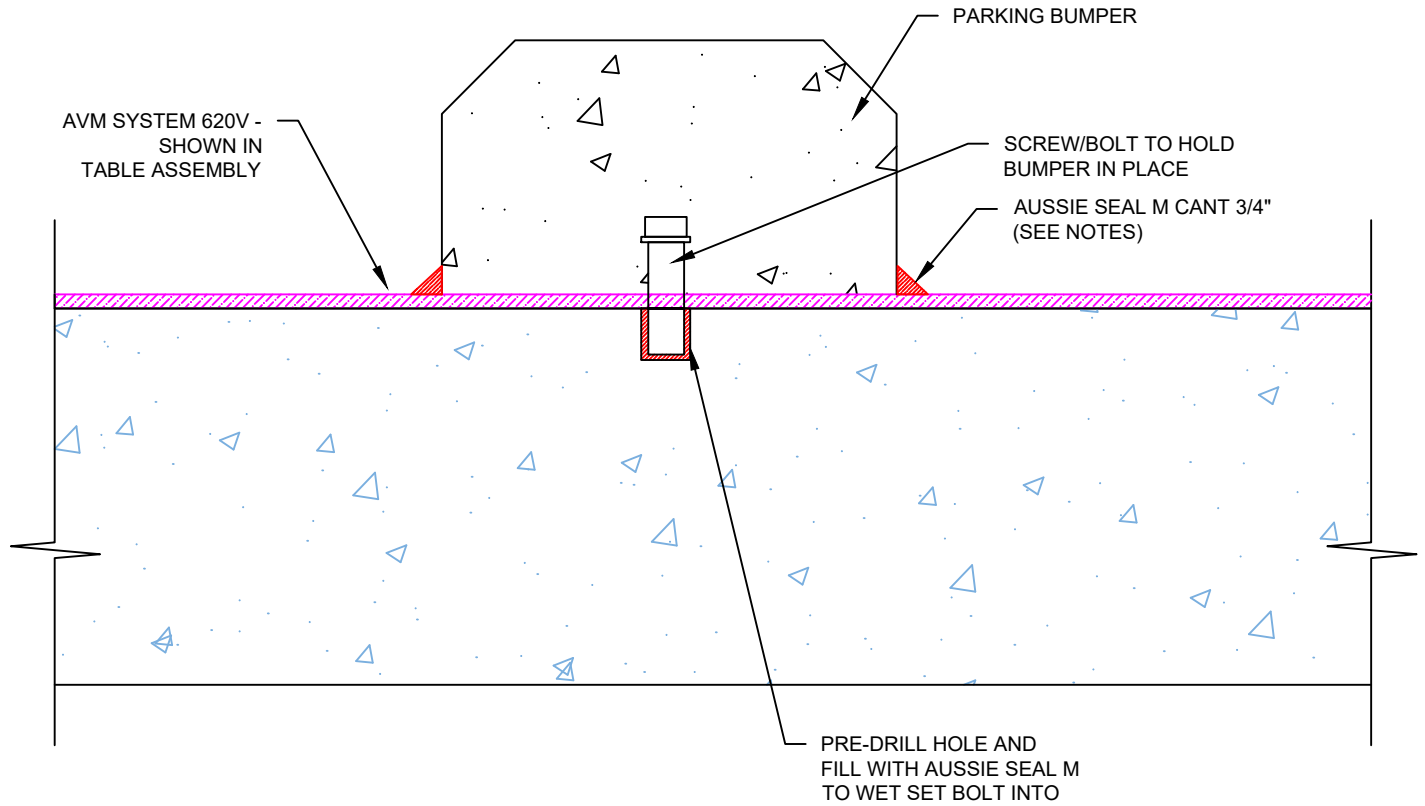

Notes:

1. Epoxy primer may be required to achieve proper adhesion depending on the substrate
2. Aussie Seal M Cant around Bumper is recommended